

 
Core Tray Racking




Core Tray Racking

Core Tray Racking End Loading

- Quick and easy to erect - lock join design virtually eliminates nuts & bolts and all slide rails are factory fitted.
- Manufactured in sizes to suit all core tray dimensions and core diameters. Complete galvanised unit ensures rust free long life. Tray spacing allows easy insert and removal.
- Modules lock join to allow unlimited expansion of racking system. Optional doors, roofing and side covers ensure complete protection.

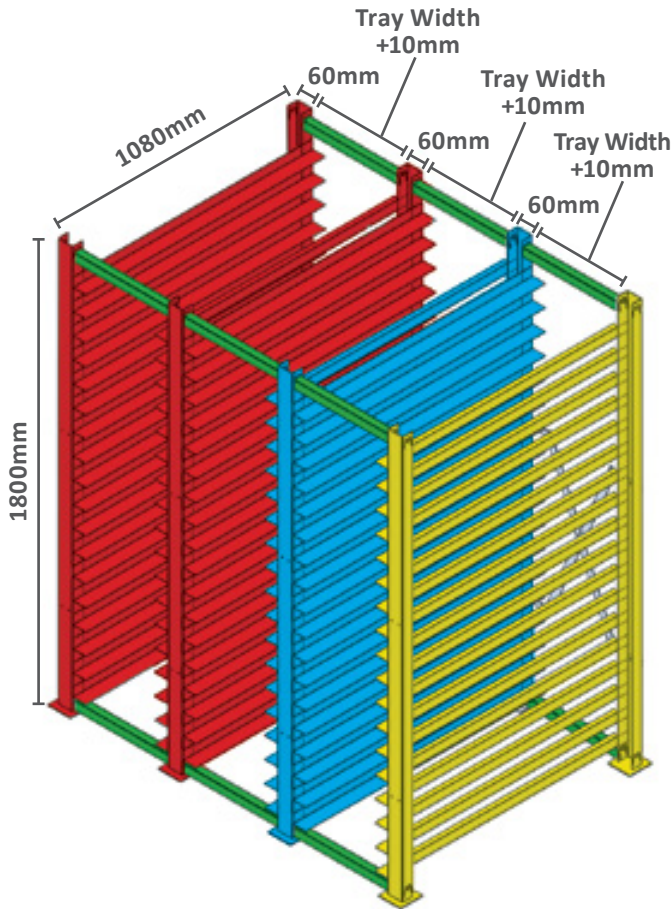

 Westernex offers the option to manufacture core tray racking that is customised to fit your needs. Please get in touch with our sales team for more information at supply@westernex.com.au

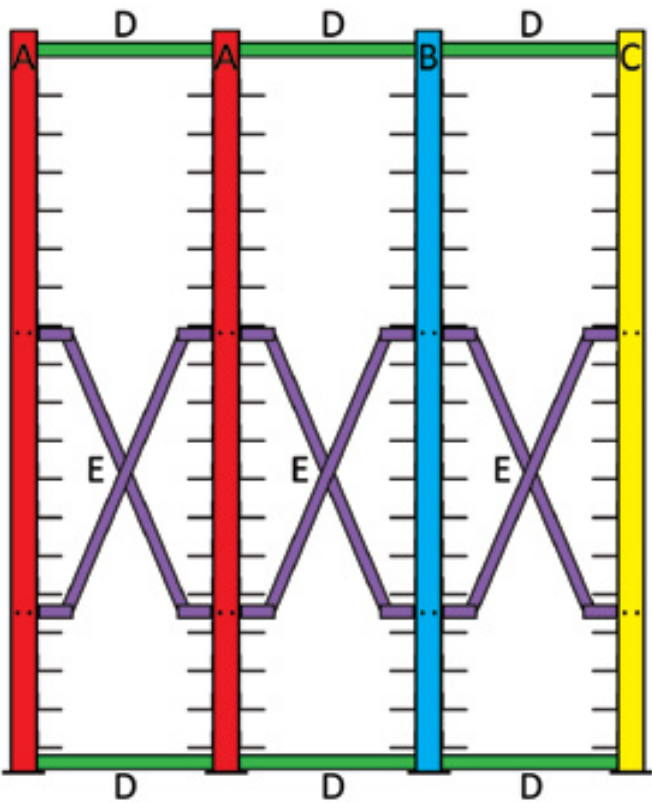

Rack Assembly Diagram

- A: Base Module
- B: Extension Module (or Supplementary)
- C: End Module
- D: Racking Spreader Bar
- E: Crossbrace

Please note: All nuts & bolts necessary for assembly of racks are supplied.

Core Tray Racking

End Loading - 1000x400 Metal Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11000-BASE	27	Base	B
1129-11000-EXT	27	Extension	B
1129-11000-END	27	End	B
1129-11001-BASE	27	Base	N2
1129-11001-EXT	27	Extension	N2
1129-11001-END	27	End	N2
1129-11002-BASE	21	Base	H
1129-11002-EXT	21	Extension	H
1129-11002-END	21	End	H
1129-11004-BASE	15	Base	P
1129-11004-EXT	15	Extension	P
1129-11004-END	15	End	P

End Loading - 1070x470 Metal Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11010-BASE	27	Base	B
1129-11010-EXT	27	Extension	B
1129-11010-END	27	End	B
1129-11011-BASE	27	Base	N2
1129-11011-EXT	27	Extension	N2
1129-11011-END	27	End	N2
1129-11012-BASE	21	Base	H
1129-11012-EXT	21	Extension	H
1129-11012-END	21	End	H
1129-11013-BASE	15	Base	P
1129-11013-EXT	15	Extension	P
1129-11013-END	15	End	P

End Loading - Impala 1 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11020-BASE	23	Base	B
1129-11020-EXT	23	Extension	B
1129-11020-END	23	End	B
1129-11021-BASE	23	Base	N2
1129-11021-EXT	23	Extension	N2
1129-11021-END	23	End	N2
1129-11022-BASE	20	Base	H
1129-11022-EXT	20	Extension	H
1129-11022-END	20	End	H
1129-11023-BASE	16	Base	P
1129-11023-EXT	16	Extension	P
1129-11023-END	16	End	P

End Loading - Impala 2 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11030-BASE	23	Base	B
1129-11030-EXT	23	Extension	B
1129-11030-END	23	End	B
1129-11031-BASE	23	Base	N2
1129-11031-EXT	23	Extension	N2
1129-11031-END	23	End	N2
1129-11032-BASE	18	Base	H
1129-11032-EXT	18	Extension	H
1129-11032-END	18	End	H
1129-11033-BASE	15	Base	P
1129-11033-EXT	15	Extension	P
1129-11033-END	15	End	P

End Loading - Impala 3 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11040-BASE	23	Base	N2
1129-11040-EXT	23	Extension	N2
1129-11040-END	23	End	N2
1129-11041-BASE	20	Base	H
1129-11041-EXT	20	Extension	H
1129-11041-END	20	End	H
1129-11042-BASE	16	Base	P
1129-11042-EXT	16	Extension	P
1129-11042-END	16	End	P

End Loading - Impala 4 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11050-BASE	23	Base	N2
1129-11050-EXT	23	Extension	N2
1129-11050-END	23	End	N2
1129-11051-BASE	20	Base	H
1129-11051-EXT	20	Extension	H
1129-11051-END	20	End	H
1129-11052-BASE	16	Base	P
1129-11052-EXT	16	Extension	P
1129-11052-END	16	End	P


End Loading - Impala 5 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11058-BASE	23	Base	N2
1129-11058-EXT	23	Extension	N2
1129-11058-END	23	End	N2
1129-11059-BASE	20	Base	H
1129-11059-EXT	20	Extension	H
1129-11059-END	20	End	H


Core Tray Racking

Core Tray Racking Side Loading

 - Quick and easy to erect - lock join design virtually eliminates nuts & bolts and all slide rails are factory fitted.
- Manufactured in sizes to suit all core tray dimensions and core diameters. Complete galvanised unit ensures rust free long life. Tray spacing allows easy insert and removal.
- Modules lock join to allow unlimited expansion of racking system. Optional doors, roofing and side covers ensure complete protection.

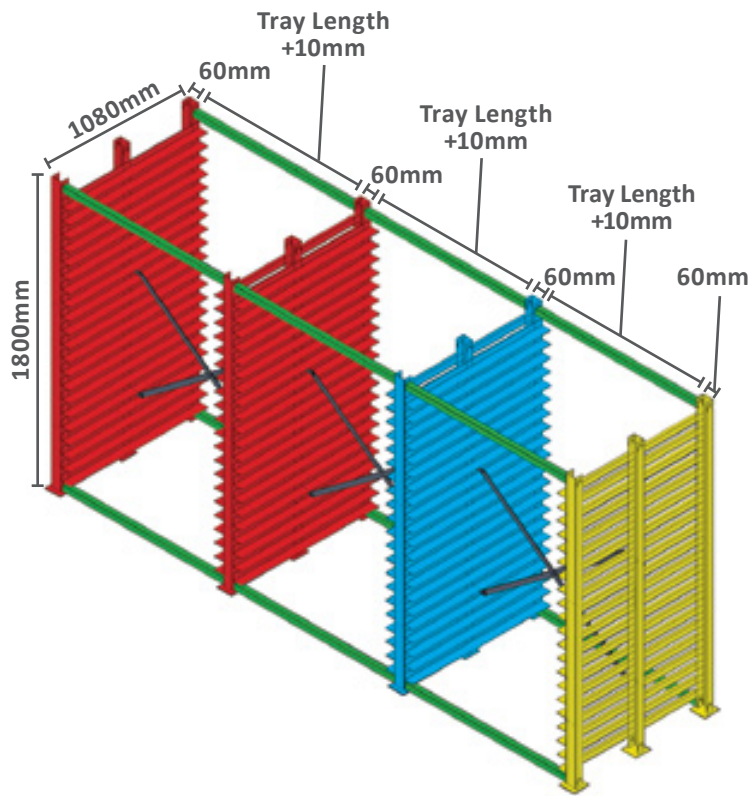

 Westernex offers the option to manufacture core tray racking that is customised to fit your needs. Please get in touch with our sales team for more information at supply@westernex.com.au

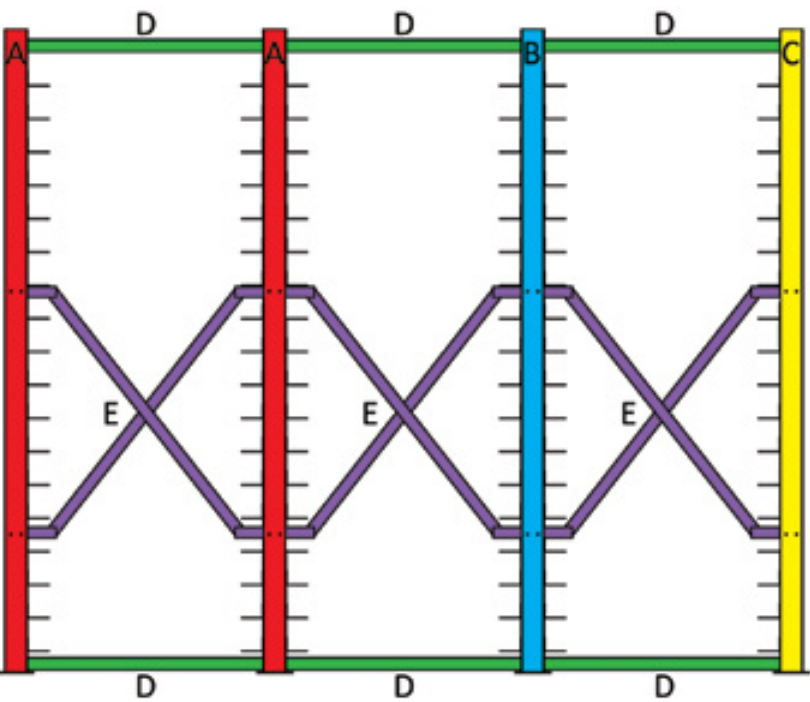

Rack Assembly Diagram

- A: Base Module
- B: Extension Module (or Supplementary)
- C: End Module
- D: Racking Spreader Bar
- E: Crossbrace

Please note: All nuts & bolts necessary for assembly of racks are supplied

Core Tray Racking

Side Loading - Impala 2 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11035-BASE	46	Base	B
1129-11035-EXT	46	Extension	B
1129-11035-END	46	End	B
1129-11036-BASE	46	Base	N2
1129-11036-EXT	46	Extension	N2
1129-11036-END	46	End	N2
1129-11037-BASE	36	Base	H
1129-11037-EXT	36	Extension	H
1129-11037-END	36	End	H
1129-11038-BASE	30	Base	P
1129-11038-EXT	30	Extension	P
1129-11038-END	30	End	P

Side Loading - Impala 3 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11044-BASE	46	Base	N2
1129-11044-EXT	46	Extension	N2
1129-11044-END	46	End	N2
1129-11045-BASE	40	Base	H
1129-11045-EXT	40	Extension	H
1129-11045-END	40	End	H
1129-11046-BASE	32	Base	P
1129-11046-EXT	32	Extension	P
1129-11046-END	32	End	P

Side Loading - Impala 4 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11055-BASE	46	Base	N2
1129-11055-EXT	46	Extension	N2
1129-11055-END	46	End	N2
1129-11056-BASE	40	Base	H
1129-11056-EXT	40	Extension	H
1129-11056-END	40	End	H
1129-11057-BASE	32	Base	P
1129-11057-EXT	32	Extension	P
1129-11057-END	32	End	P

Side Loading - Impala 5 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11060-BASE	46	Base	N2
1129-11060-EXT	46	Extension	N2
1129-11060-END	46	End	N2
1129-11061-BASE	40	Base	H
1129-11061-EXT	40	Extension	H
1129-11061-END	40	End	H

Side Loading - 1000x400 Metal Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11005-BASE	54	Base	B
1129-11005-EXT	54	Extension	B
1129-11005-END	54	End	B
1129-11006-BASE	54	Base	N2
1129-11006-EXT	54	Extension	N2
1129-11006-END	54	End	N2
1129-11007-BASE	42	Base	H
1129-11007-EXT	42	Extension	H
1129-11007-END	42	End	H
1129-11008-BASE	30	Base	P
1129-11008-EXT	30	Extension	P
1129-11008-END	30	End	P

Side Loading - 1070x470 Metal Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11014-BASE	54	Base	B
1129-11014-EXT	54	Extension	B
1129-11014-END	54	End	B
1129-11015-BASE	54	Base	N2
1129-11015-EXT	54	Extension	N2
1129-11015-END	54	End	N2
1129-11016-BASE	42	Base	H
1129-11016-EXT	42	Extension	H
1129-11016-END	42	End	H
1129-11017-BASE	30	Base	P
1129-11017-EXT	30	Extension	P
1129-11017-END	30	End	P

Side Loading - Impala 1 Trays

SKU	QUANTITY (TRAYS/MODULES)	TYPE	SIZE
1129-11025-BASE	46	Base	B
1129-11025-EXT	46	Extension	B
1129-11025-END	46	End	B
1129-11026-BASE	46	Base	N2
1129-11026-EXT	46	Extension	N2
1129-11026-END	46	End	N2
1129-11027-BASE	40	Base	H
1129-11027-EXT	40	Extension	H
1129-11027-END	40	End	H
1129-11028-BASE	32	Base	P
1129-11028-EXT	32	Extension	P
1129-11028-END	32	End	P



Perth Main Warehouse

66 Truganina Rd, Malaga,
Western Australia 6090
+61 (0) 8 9209 8500
perth@westernex.com.au

Kalgoorlie Warehouse

18 Kinclaven Way, Broadwood,
Kalgoorlie, Western Australia 6430
+61 (0) 8 9091 1152
kalgoorlie@westernex.com.au

Brisbane Warehouse

14 Hasp St, Seventeen Mile Rocks,
Queensland 4073
+61 (0) 7 3376 2422
brisbane@westernex.com.au

Mt Isa Warehouse

13 Ryan Rd, (Entry off Davis Rd)
Mt Isa, Queensland 4825
+61 (0)7 4743 2122
mtisa@westernex.com.au

Orange Warehouse

72 Astill Drive, Orange,
NSW, 2800
+61 (0) 7 3376 2422
brisbane@westernex.com.au

